



NURAGRID™

INSTALLATION GUIDE



CONTENT


NURAGRID INSTALLATION GUIDE FOR STRUCTURAL TILE & PAVERS.....	3
--	---

NURAGRID INSTALLATION GUIDE FOR SPOT-FIXED STRUCTURAL TILE & PAVERS.....	5
---	---


NURAGRID INSTALLATION GUIDE FOR ADHERED NON-STRUCTURAL TILE & PAVERS.....	8
--	---

NURAGRID INSTALLATION GUIDE FOR SYNTHETIC TURF.....	11
--	----


NURAGRID INSTALLATION GUIDE FOR STRUCTURAL TILE & PAVERS

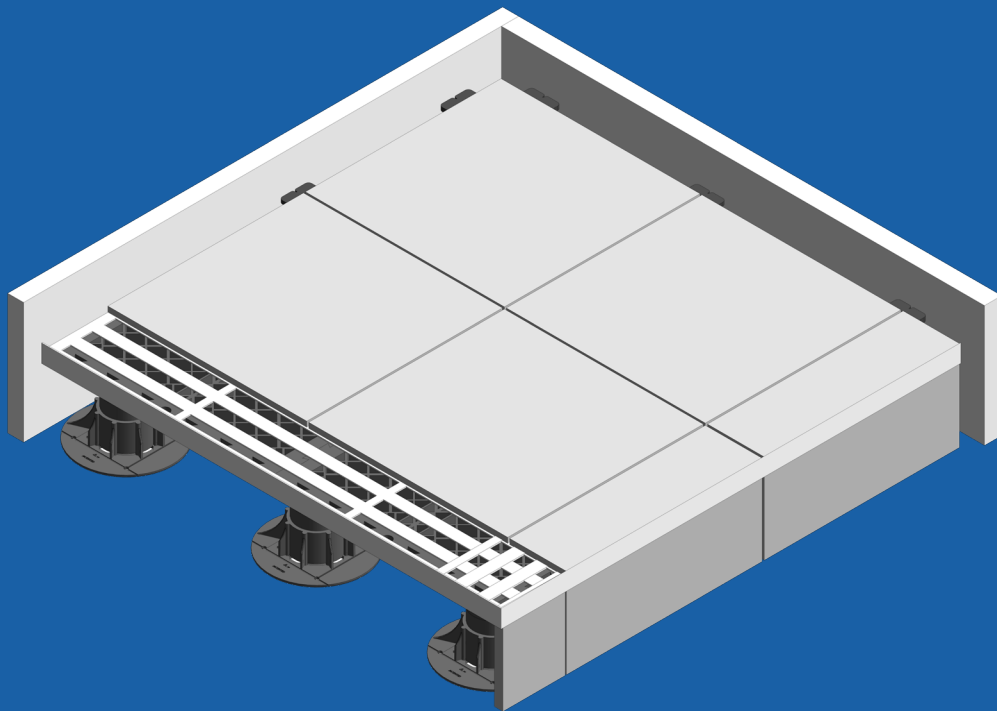


NURAGRID INSTALLATION GUIDE FOR STRUCTURAL TILE & PAVERS

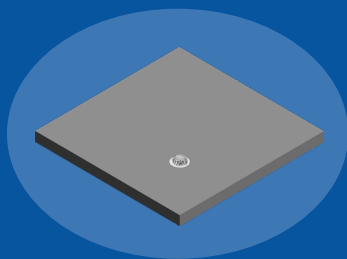


1. Sweep substrate clear of debris.

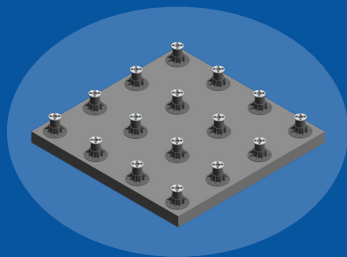


2. Install Nurajacks and Nuragrid as per Installation video [here](https://www.youtube.com/@Nurajack) (www.youtube.com/@Nurajack).
No centre pedestal required.

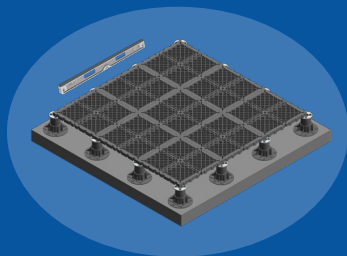


3. Ensure Nuragrid is flat, firm and stable.
Check surface with 1.8m straight edge.
Install additional Nurajacks as required.

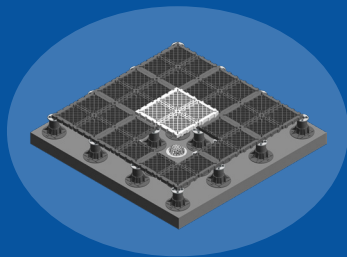


4. Ensure Nuragrid layout enables outlets to be accessible for cleaning. Interrupt layout if necessary. Detail drawings available [here](https://www.nurajack.co.nz/nuragrid) (www.nurajack.co.nz/nuragrid).

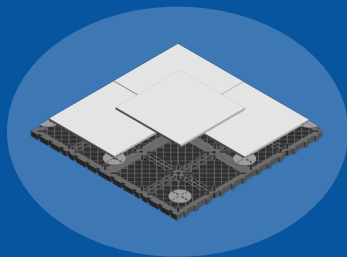

5. Install tiles/pavers with the Nuragrid Tile Spacer.
Add additional Shims depending on tile size and format for tile support.

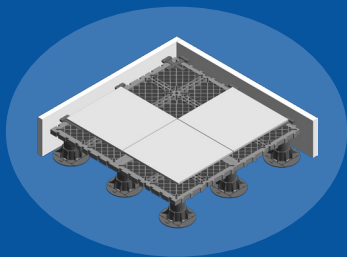


6. Install Nurajack Tile Cladding Clips around the perimeter to space off vertical surfaces.

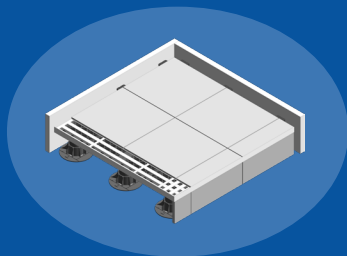


7. For areas with no containment, consider spot fixing the pavers to the Nuragrid. See [page 5](#) for Spot-fixed Structural Tile and Pavers.


NURAGRID INSTALLATION GUIDE FOR SPOT-FIXED STRUCTURAL TILE & PAVERS

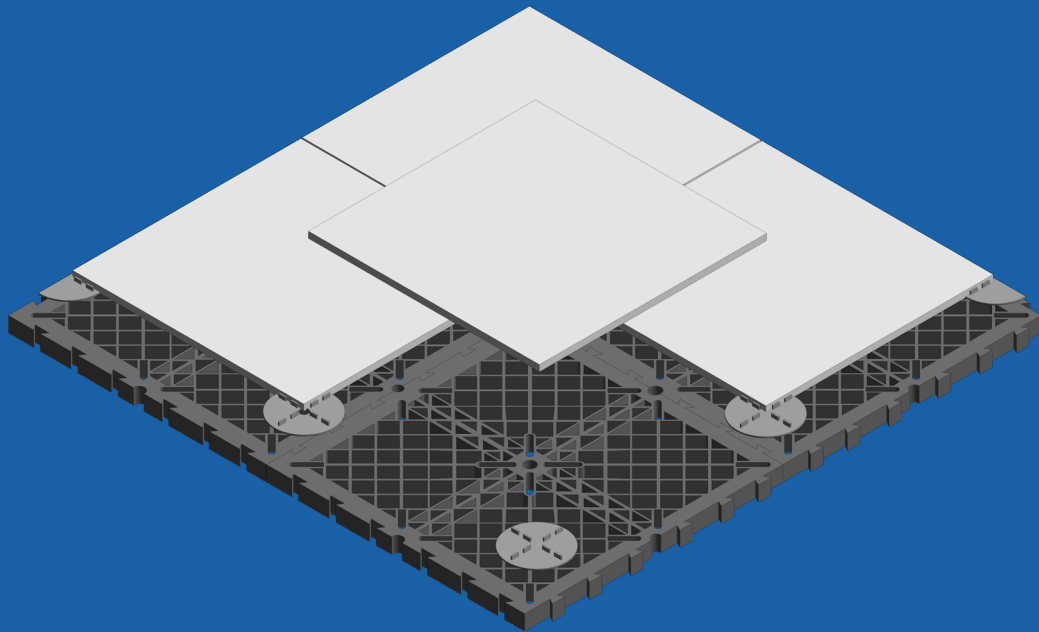


NURAGRID INSTALLATION GUIDE FOR SPOT-FIXED STRUCTURAL TILE & PAVERS

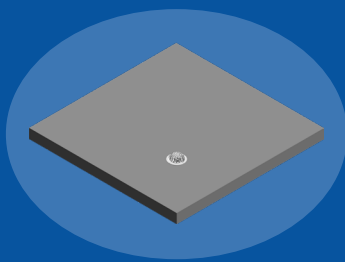


1. Sweep substrate clear of debris.

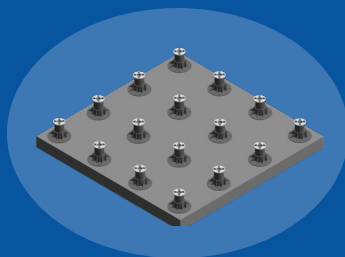


2. Install Nurajacks and Nuragrid as per Installation video [here](https://www.youtube.com/@Nurajack) (www.youtube.com/@Nurajack).
No centre pedestal required.

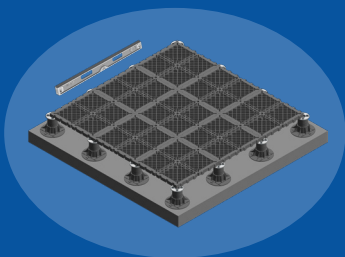


3. Ensure Nuragrid is flat, firm and stable.
Check surface with 1.8m straight edge.
Install additional Nurajacks as required.

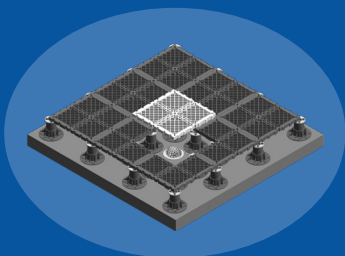

4. Ensure Nuragrid layout enables outlets to be accessible for cleaning. Interrupt layout if necessary. Detail drawings available [here](https://www.nurajack.co.nz/nuragrid) (www.nurajack.co.nz/nuragrid).

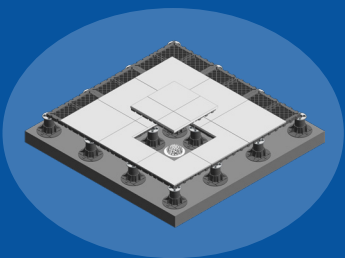


5. String line or laser tile/paver layout on Nuragrid.
Avoid using chalk lines.
Build inspection hatch to suit outlets.

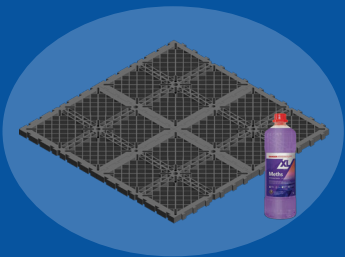


6. Clean Nuragrid surface with meths ensuring surface is dry and dust-free.

NURAGRID INSTALLATION GUIDE FOR SPOT-FIXED STRUCTURAL TILE & PAVERS

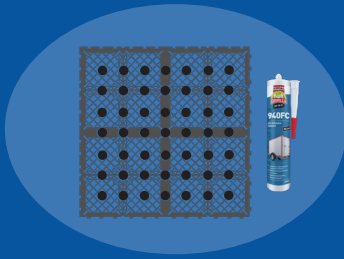


7. Apply spot-fix style of Soudal 940FC PU adhesive to area for each tile, targeting holes and slots in the grid pattern. Approximately 1 x 600ml sausage of adhesive is required for every 2m².

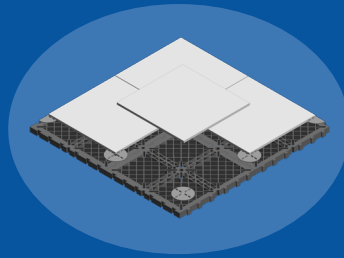


8. Install tile using Nuragrid Tile Spacer and press firm using Shims and levelling clips as required. Allow to cure for 7 working days at 22 degrees Celsius. Avoid foot traffic until full cure time elapses.

NOTE: It is strongly recommended that tiles or pavers are tested for suitability with the Nuragrid system, including adhesive compatibility. Nuralite Group Ltd. accepts no liability for the performance of adhesives used in conjunction with Nuragrid.


NURAGRID INSTALLATION GUIDE FOR NON-STRUCTURAL ADHERED TILE & PAVERS

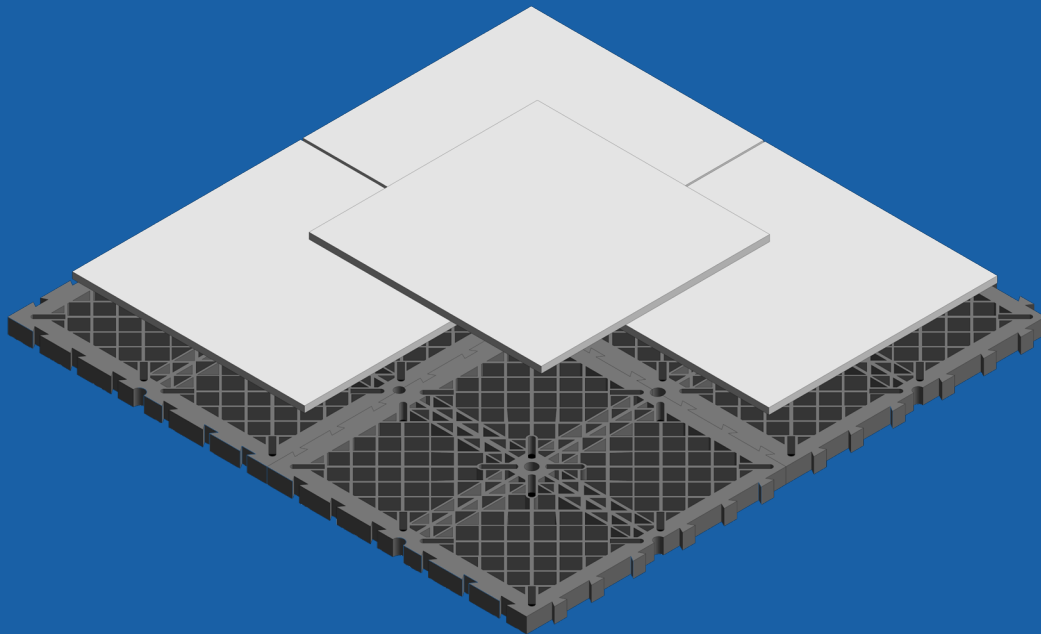


NURAGRID INSTALLATION GUIDE FOR NON-STRUCTURAL ADHERED TILE & PAVERS

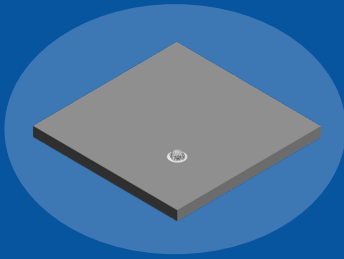


1. Sweep substrate clear of debris.

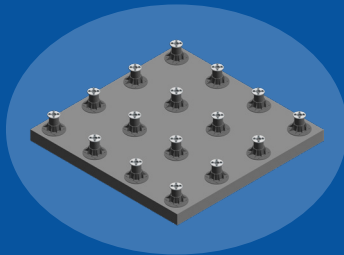


2. Install Nurajacks and Nuragrid as per Installation video [here](https://www.youtube.com/@Nurajack) (www.youtube.com/@Nurajack).

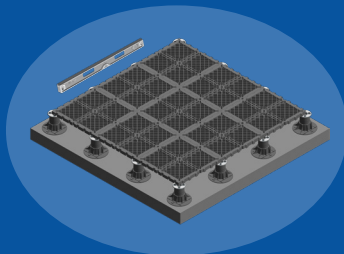


3. Ensure Nuragrid is flat, firm and stable. Check surface with 1.8m straight edge. Installing additional Nurajacks is recommended.

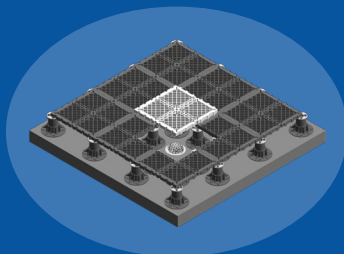

4. Ensure Nuragrid layout enables outlets to be accessible for cleaning. Interrupt layout if necessary. Detail drawings available [here](https://www.nurajack.co.nz/nuragrid) (www.nurajack.co.nz/nuragrid).

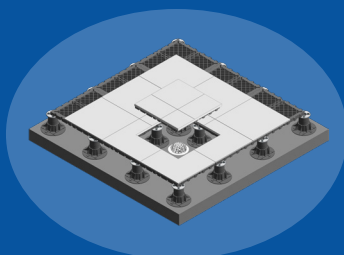


5. Use a straight edge or laser to design tile/paver layout on Nuragrid. Avoid using chalk lines. Build inspection hatch to suit outlet.

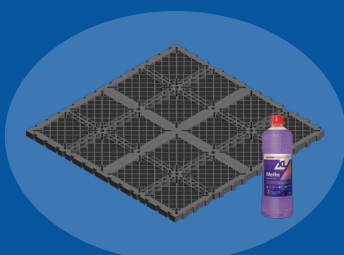


6. Clean Nuragrid surface with meths ensuring surface is dry and dust-free.

NURAGRID INSTALLATION GUIDE FOR NON-STRUCTURAL ADHERED TILE & PAVERS

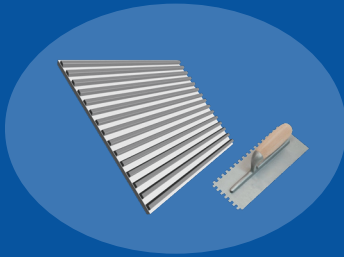

7. Using 15mm notch trowel, apply selected stone and tile adhesive to tile/paver following glue manufacturer's instructions. Ensure full coverage of adhesive to the back of the tile/paver.


Install tiles by firmly pressing onto the Nuragrid using shims or levelling clips as necessary. Adhesive must protrude into the underside of the Nuragrid.

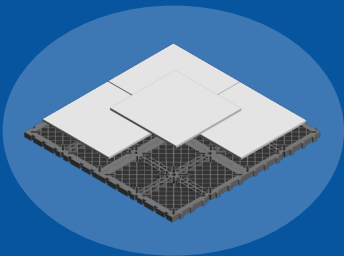


8. Allow to cure as per glue manufacturers recommendations. Avoid foot traffic until full cure time elapses.

NOTE: It is strongly recommended that tiles or pavers are tested for suitability with the Nuragrid system, including adhesive compatibility. Nuralite Group Ltd. accepts no liability for the performance of adhesives used in conjunction with Nuragrid.


NURAGRID INSTALLATION GUIDE FOR SYNTHETIC TURF

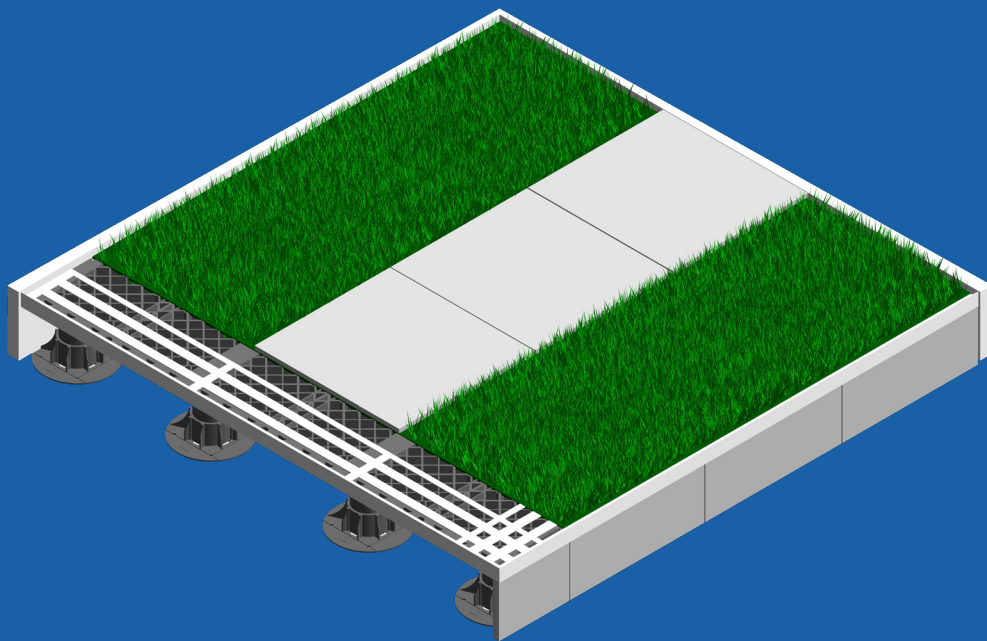


NURAGRID INSTALLATION GUIDE FOR SYNTHETIC TURF

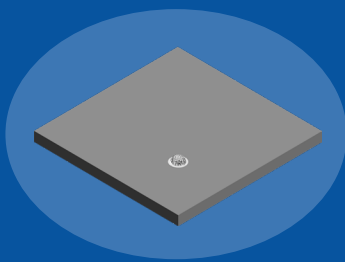


1. Sweep substrate clear of debris.

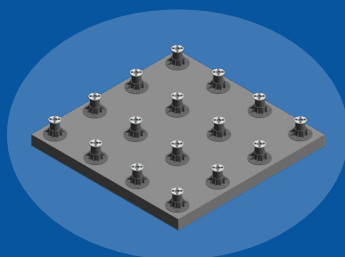


**2. Install Nurajacks and Nuragrid as per Installation video [here](https://www.youtube.com/@Nurajack) (www.youtube.com/@Nurajack).
No centre pedestal required.**

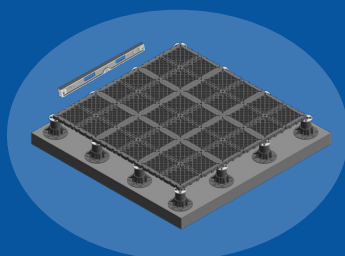


**3. Ensure Nuragrid is flat, firm and stable.
Check surface with 1.8m straight edge.
Install additional Nurajacks as required.**

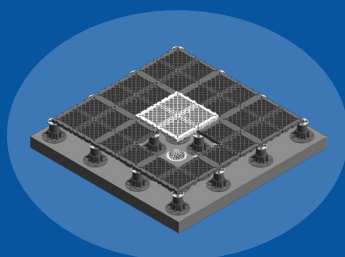

4. Ensure Nuragrid layout enables outlets to be accessible for cleaning. Interrupt layout if necessary. Detail drawings available [here](https://www.nurajack.co.nz/nuragrid) (www.nurajack.co.nz/nuragrid).

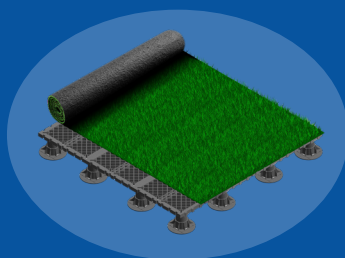


5. Roll selected turf onto Nuragrid following manufacturer's instructions.

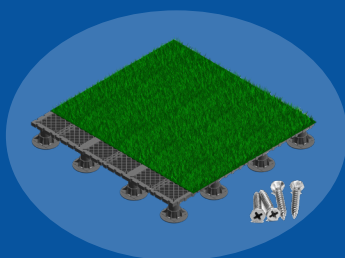


6. Consider screwing perimeter of turf at recommended intervals with 10G x 30mm stainless steel wood screws. If required, weight off turf with sand as per manufacturer's instructions, taking care not to allow sand onto tiled/paved areas. Precautions should be taken to minimise sand tracking to drainage outlets.


NURAGRID INSTALLATION GUIDE FOR SYNTHETIC TURF

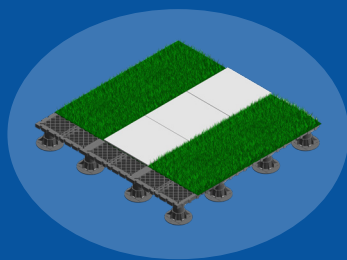

7. If installing tiles/pavers, see page 3 for Tiles and Pavers.

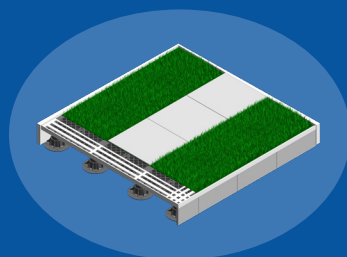

8. For areas with no containment, install Nurajack Tile Edge Trim with 10G x 30mm stainless steel wood screws to perimeter. Install vertical tile as necessary.

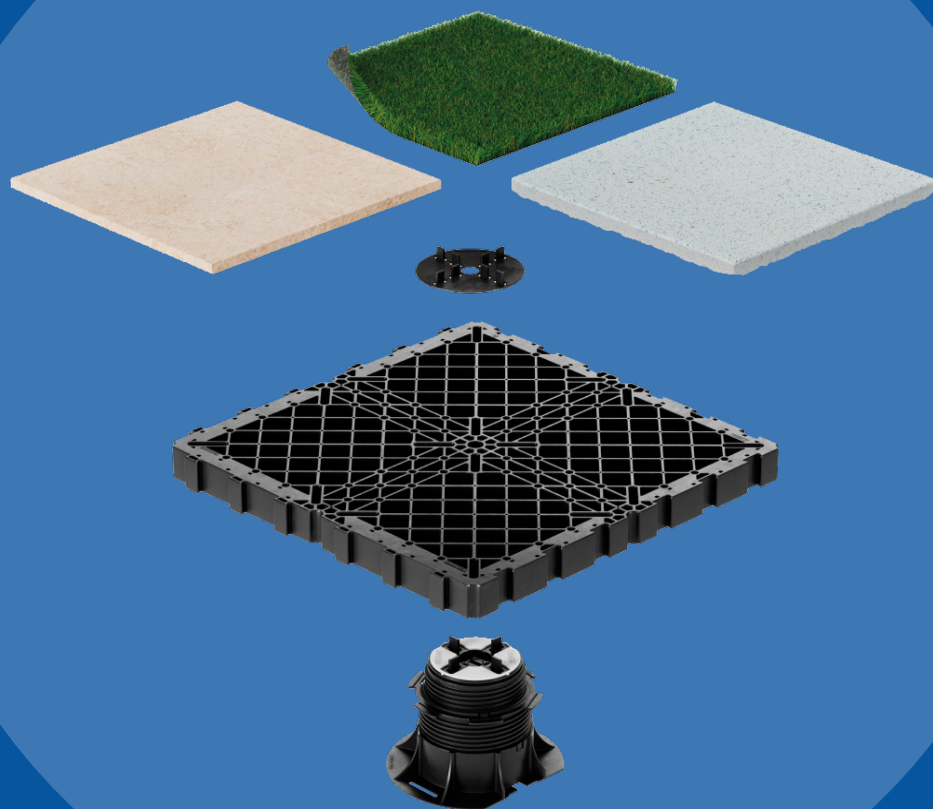

☎ : 0800 687 252
🌐 : www.nurajack.co.nz

 **NURAJACK**
DECKING MADE EASY